

# Yealink UH34 Headset



## **Revision History**

Revision	Date	Description	Initials
1.0	3/14/22	First published version.	JN
		Ve	rsion 1.0



#### **Overview**

Guide to help assist with using The Yealink UH34 Headset.

#### **Assemble Headset**



Connect the 3.5 mm headphone jack (1) To the 3.5mm headphone port (2) on usb dongle.

#### How to Connect UH34 To PC



1: Connect one end of the USB cable to the Headset via 3.5mm connector.

2: Connect other end of USB cable to USB port on PC



### How to Connect UH34 To Phone (Optional)



- 1: Connect one end of the USB cable to the Headset via 3.5mm connector.
- 2: Connect to USB port on Phone. (Only compatible with USB headset enabled phones).

#### **UH34 Buttons and Controls**



1: Answer / End - Press to answer, reject, or end call.

\*Call controls such as hang up and answer do not work with NHC UC Max soft phone.

- 2: Mute Button Press to mute or unmute microphone
- 3: Teams Button/Voice Assistant Press to activate Teams/Voice assistant.
- 4: Volume Up Press to increase volume.
- 5: Volume Down Press to decrease volume.



## Selecting UH34 from newVoice Desktop



Click on Tools

Then Select Options

 $\times$ 

10115						
ے) eneral	Sec. Calls	(Left) Meetings	 Chat	Audio	Video	
Microp J —	ohone —			•		Ų.
Head	set Microph	one (Yealink U	JH36)	~	Test Mic	
In-call	Audio —					
In-call In-call In-call In-call In-call In-call In-call In-call	Audio	e (Yealink UH:	36)	~	•	(t)
In-call	Audio	e (Yealink UH:	36)	~	•	هن 
In-call In-call Head: Ringto In-call Head: Head:	Audio	e (Yealink UH: e (Yealink UH:	36)	~	•	a(>

#### Click On Audio Options

Select Yealink UH36 from drop down menus for Microphone and In-call Audio

Select a source from the drop down list you wish the notification and ringing to play.